


THE USE OF VIBRATION ABSORBING PADS PLACED UNDER THE MACHINE'S BASE CAN REDUCE THE NOISE LEVEL OF THE UNIT.



33082 Azzano Decimo, PN, ITALY

FOR CARDAN SHAFT AND HYDRAULIC DRIVE:

PLACE THE PADS UNDER THE PUMP. USE A SAFETY BOLT AS SHOWN IN THE DRAWING.
DETERMINE THE POSITION TO OBTAIN COMPRESSION LOAD OVER ALL THE PADS.

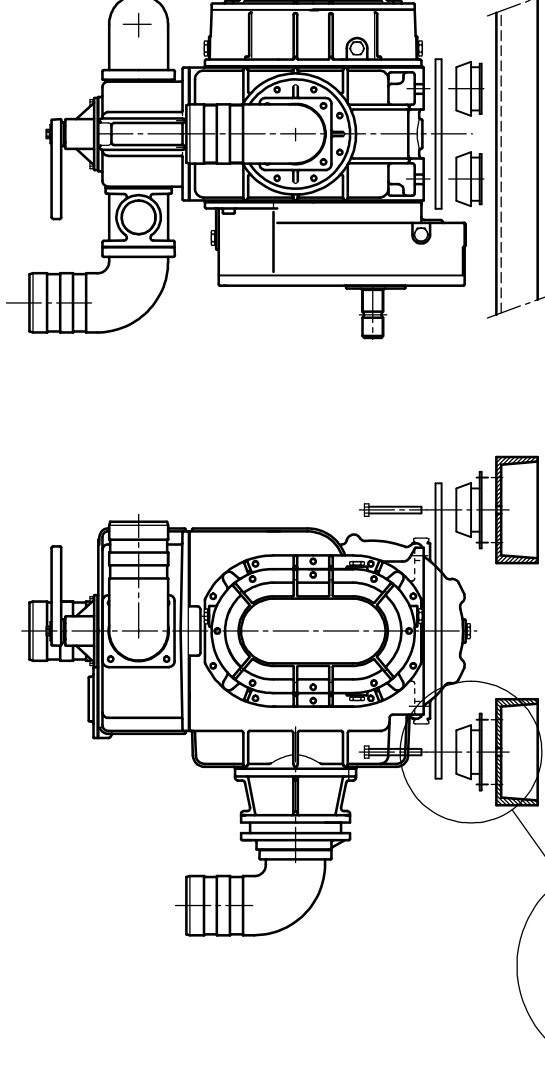


ELASTIC BEARINGS (COD.4025.2101.01)
FITTED WITH SAFETY BOLT

ELASTIC BEARING CHARACTERISTICS
HARDNESS: 45 SHORE
LOAD: 3000 N
DEFLECTION: 4.6 MM
FREQ. : 9 Hz

FOR BELTS AND PULLEY DRIVE:

PLACE THE PADS UNDER THE BASEMENT MADE FOR THE DRIVE PULLEY AND THE PUMP.
DETERMINE THE POSITION TO OBTAIN COMPRESSION LOAD OVER ALL THE PADS.

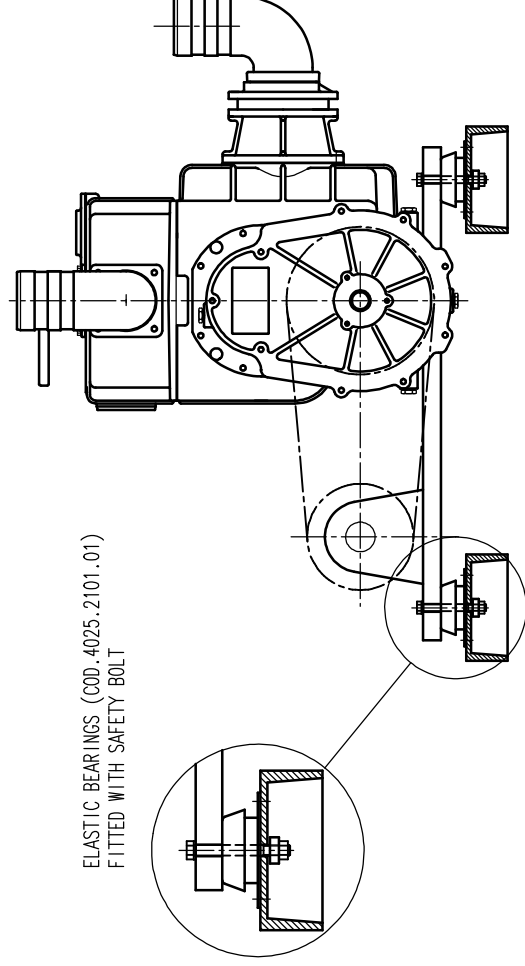

ELASTIC BEARINGS (COD.4025.2101.01)
FITTED WITH SAFETY BOLT


THE USE OF VIBRATION ABSORBING PADS PLACED UNDER THE MACHINE'S BASE CAN REDUCE THE NOISE LEVEL OF THE UNIT.



33082 Azzano Decimo, PN, ITALY

FOR CARDAN SHAFT AND HYDRAULIC DRIVE:

PLACE THE PADS UNDER THE PUMP. USE A SAFETY BOLT AS SHOWN IN THE DRAWING.
DETERMINE THE POSITION TO OBTAIN COMPRESSION LOAD OVER ALL THE PADS.

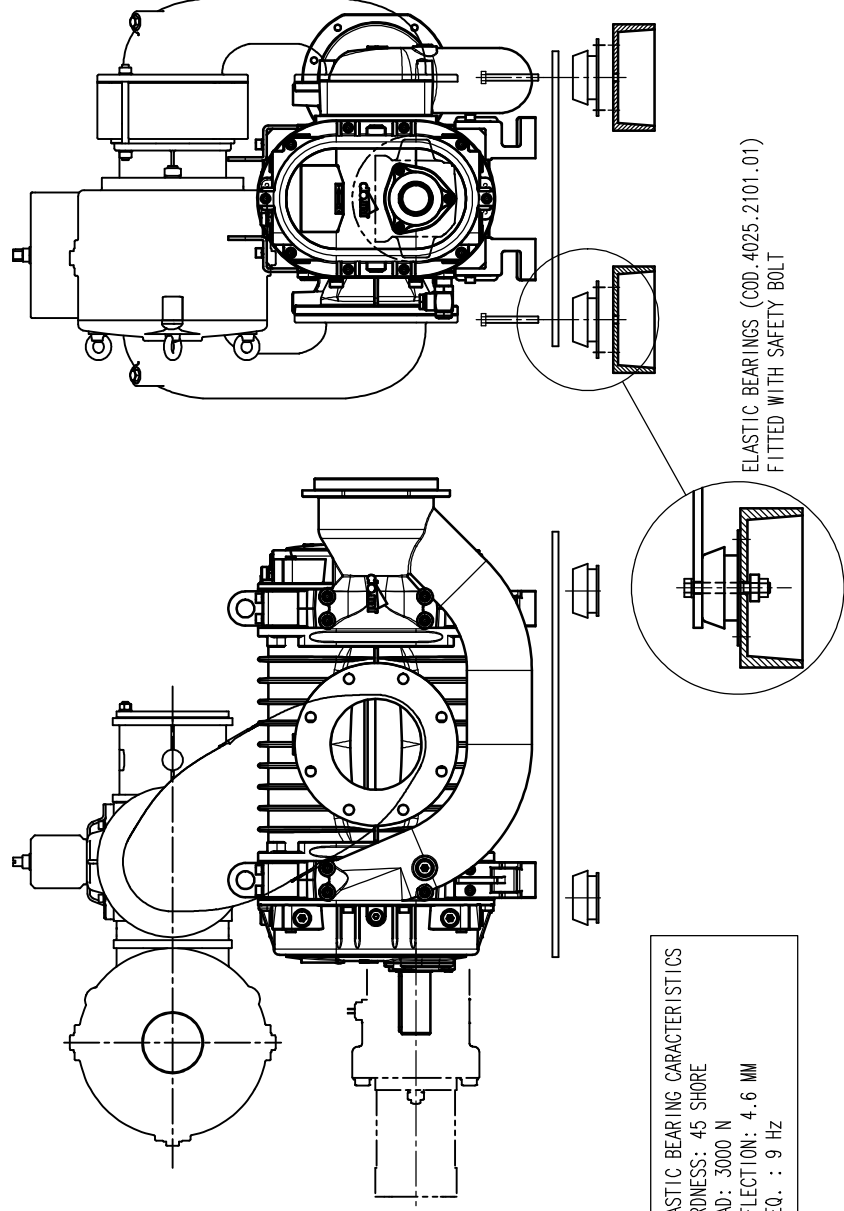

FOR BELTS AND PULLEY DRIVE:

PLACE THE PADS UNDER THE BASEMENT MADE FOR THE DRIVE PULLEY AND THE PUMP.
DETERMINE THE POSITION TO OBTAIN COMPRESSION LOAD OVER ALL THE PADS.

